


HOZELOCK

AC2

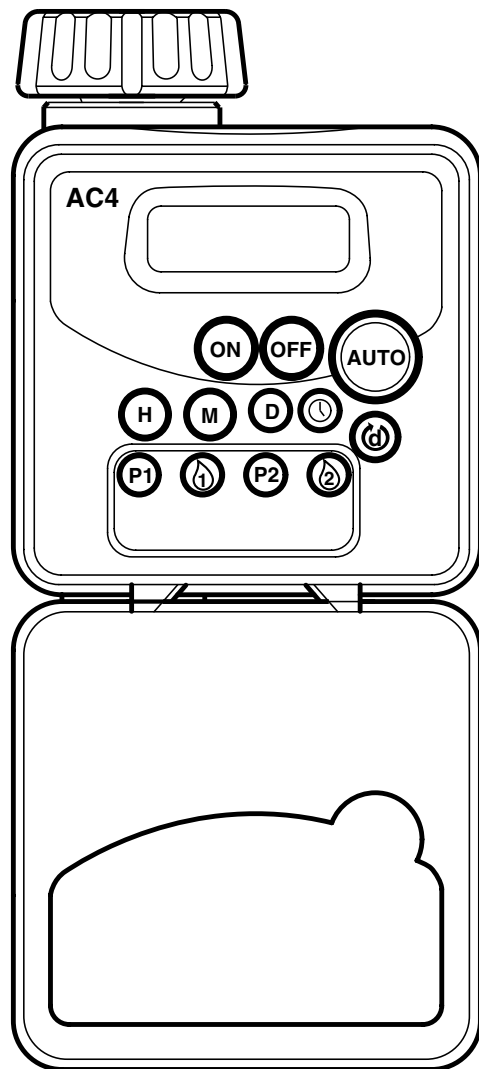


HOZELOCK AC2

TWO PROGRAMMES PER DAY WATER TIMER

Please follow the instructions to make sure that you get the most from your timer for simple and efficient watering.

QUICK REFERENCE

1. Turns water on
2. Turns water off and all auto programmes
3. Starts programmes
4. Sets hour
5. Sets minute
6. Sets day
7. Sets number of watering days
8. Sets present time and day
9. Sets programmes
10. Sets watering duration

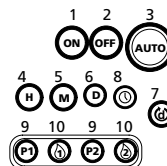

INSTALLING THE BATTERIES

1. Remove screws and back cover.
2. Insert two good quality 1.5V 'C' Alkaline batteries. (Check + and - are correct.). **IMPORTANT:** Rechargeable batteries must not be used.
3. Replace batteries each season. (max 12 months use.)

MAINTAINING THE WATERPROOF SEAL

1. Ensure that rubber seal is positioned correctly.
2. Replace back cover and screw down tightly, ensuring each screw is fitted with its seal.
3. Repeat each time back cover is removed.

HOW TO PROGRAMME THE AC2

Note: After you press any button other than **ON/OFF** or **AUTO**, **H**, **M** or **D** the AC2 will revert back to showing time after 15 seconds if no other button is pressed.

The AC2 has Manual or Automatic watering operations. It can water up to twice each day or every 2nd or 3rd day. But first the time and day must be set.

Setting the Time and Day (Note: 24 Hour clock)

1. Press clock button ("TIME" will flash whilst being set).
2. Press **H** (hour), **M** (minute), **D** (day) to show correct time and day.
3. When correct press **OFF** to set (TIME and DAY now set).

Setting the first WATERING DAY

(This is the first day your AC2 will water and can be the same or different to the actual day.)

1. Press **P1**.
2. Press **D** to choose Watering Day e.g. Mo for Monday.
3. Press **OFF** to set (Watering Day now set).

Setting the number of WATERING DAYS

1. Press (1, 2, 3 will be displayed). Each press of changes the number of watering days (1 waters every day, 2 every second day and 3 every third day).
2. Press **OFF** to set (The number of Watering Days is now set).

Setting the watering PROGRAMMES for each WATERING DAY

The AC2 has 2 programmes, **P1** and **P2**, for watering up to twice each watering day.

Set each one as follows:

1. Press **P1**.
2. Press **H** (hour) and **M** (minute) to set **START TIME**.
3. Press , watering time button.
4. Press **H** (hour) and **M** (minute) for length of watering time. (Maximum time for any 1 programme is 5 hours 59 minutes.)
5. When you have chosen your programme press **OFF** to set (Programme 1 is now set).
6. Press **P2** and repeat setting sequences 2, 3 (pressing), 4 and 5.
7. To cancel a programme set to 00.00 or to 00.00.

Checking your settings

1. To check start times press **P1** or **P2**.
2. To check length of watering times press **1** or **2**.
3. When finished press **OFF**.
4. Press **AUTO** button to commence programmes.

USING THE MAIN CONTROL BUTTONS

ON, OFF and AUTO


ON turns the water on (but will turn off automatically after 59 minutes).

OFF turns the water off.

AUTO starts your programmes.

CONNECTING THE TIMER TO THE TAP

Use supplied adaptors if required.

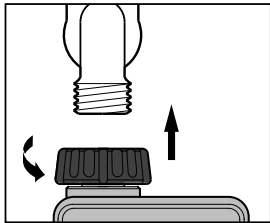

PROTECT YOUR WATER TIMER FROM FROST. REMOVE FROM THE TAP IN WINTER. PRODUCT NOT GUARANTEED AGAINST FROST DAMAGE. REMOVE BATTERIES WHEN NOT IN USE.

PROBLEM SOLVING

Problem	Solution
Motor turns but LCD is blank.	Batteries are flat or poor quality. Replace.
Valve will not open or close when ON or OFF is pressed, LCD screen blank.	Clean battery connections or replace with new batteries.
LCD screen shows BATT .	Replace batteries.
LCD screen shows a display but nothing works.	Take out batteries - then put them back in again.
Valve works but no water flows.	Check if tap is turned on.
No Auto programme when AUTO button is pressed.	Programmes need to be set or re-set.
Auto programmes not operating.	Check AUTO has been selected. Check watering day is set correctly.

