 




**Hozelock UK Garden Irrigation & Automatic Watering Systems**

# HOZELOCK

## AC4

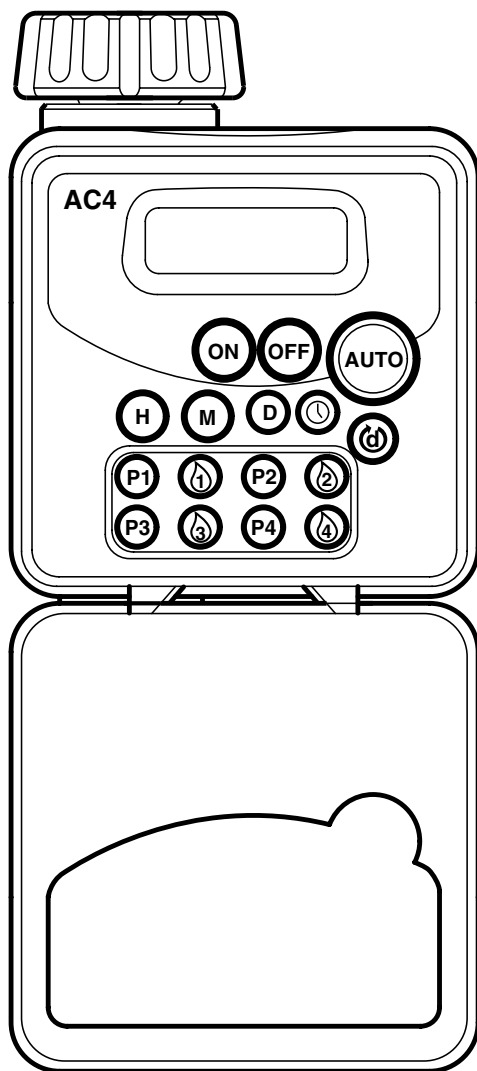

2707

 
### HOZELOCK AC4

#### FOUR PROGRAMMES PER DAY WATER TIMER

Please follow the instructions to make sure that you get the most from your timer for simple and efficient watering.

#### QUICK REFERENCE

1. Turns water on
2. Turns water off and all auto programmes
3. Starts programmes
4. Sets hour
5. Sets minute
6. Sets day
7. Sets number of watering days
8. Sets present time and day
9. Sets programmes
10. Sets watering duration

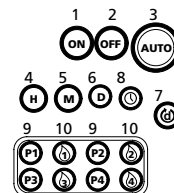

#### INSTALLING THE BATTERIES

1. Remove screws and back cover.
2. Insert two good quality 1.5V 'C' Alkaline batteries. (Check + and - are correct.). IMPORTANT: Rechargeable batteries must not be used.
3. Replace batteries each year. (max 12 months use).

#### MAINTAINING THE WATERPROOF SEAL

1. Ensure that rubber seal is positioned correctly.
2. Replace back cover and screw down tightly, ensuring each screw is fitted with its seal.
3. Repeat each time back cover is removed.

#### HOW TO PROGRAMME THE AC4

Note: After you press any button other than **ON/OFF** or **AUTO**, **H**, **M** or **D** the AC4 will revert back to showing time after 15 seconds if no other button is pressed.

The AC4 has Manual or Automatic watering operations. It can water up to four times each day, or every 2nd, 3rd, 4th, 5th, 6th or 7th days. But first the time and day must be set.

#### Setting the Time and Day (Note: 24 Hour clock)

1. Press clock button (🕒) ("TIME" will flash whilst being set).
2. Press **H** (hour), **M** (minute), **D** (day) to show correct time and correct day (shown at bottom of screen).
3. When correct press **OFF** to set (TIME and DAY now set).

#### Setting the first WATERING DAY

(This is the first day your AC4 will water and can be the same or different to the actual day).

1. Press **P1**.
2. Press **D** to choose Watering Day e.g. Mo for Monday.
3. Press **OFF** to set (Watering Day now set).

#### Setting the number of WATERING DAYS

1. Press (🕒) (1, 2, 3, 4, 5, 6, 7 will be displayed). Each press of (🕒) changes the number of watering days (1 waters every day, 2 every second day, 3 every third day and so on).
2. Press **OFF** to set (The number of Watering Days is now set).

#### Setting the watering PROGRAMMES for each WATERING DAY

The AC4 has 4 programmes, **P1**, **P2**, **P3** and **P4**, for watering up to four times each watering day. Set each one as follows:

1. Press **P1**.
2. Press **H** (hour) and **M** (minute) to set START TIME.
3. Press (🕒), watering time button.
4. Press **H** (hour) and **M** (minute) for length of watering time.  
Maximum time for any 1 programme is 11 hours 59 minutes
5. When you have chosen your watering time press **OFF** to set (Programme 1 is now set).
6. For **P2**, **P3** and **P4**, repeat setting sequences 2,3 (pressing (🕒), (🕒), (🕒) accordingly), 4 and 5.
7. To cancel a programme set (🕒), (🕒), (🕒) or (🕒) to 00.00.

### Checking your settings

1. To check start times press **P1**, **P2**, **P3** or **P4**.
2. To check length of watering times press **d**, **d**, **d** or **d**.
3. When finished press **OFF**.
4. Press **AUTO** button to commence programmes.

### USING THE MAIN CONTROL BUTTONS

#### ON, OFF and AUTO

**ON** turns the water on (but will turn off automatically after 59 minutes).

 
**OFF** turns the water and programmes off. Can be selected whilst programme is in operation.

**AUTO** starts your programmes.

Note: When selecting ON it is possible to change the 59 minute countdown by pressing H (Hour) and M (Minute) to a maximum of 11 hours 59 minutes.

#### CONNECTING THE TIMER TO THE TAP

Use supplied adaptors if required.

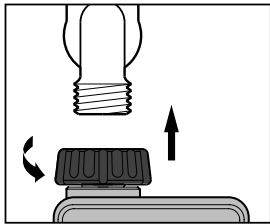

**PROTECT YOUR WATER TIMER FROM FROST. REMOVE FROM THE TAP IN WINTER. PRODUCT NOT GUARANTEED AGAINST FROST DAMAGE. REMOVE BATTERIES WHEN NOT IN USE.**

### PROBLEM SOLVING

Problem	Solution
Motor turns but LCD is blank.	Batteries are flat or poor quality. Replace.
Valve will not open or close when <b>ON</b> or <b>OFF</b> is pressed, LCD screen blank.	Clean battery connections or replace with new batteries.
LCD screen shows <b>BAtE</b> .	Replace batteries.
LCD screen shows a display but nothing works.	Take out batteries - then put them back in again.
Valve works but no water flows.	Check if tap is turned on.
No Auto programme when <b>AUTO</b> button is pressed.	Programmes need to be set or re-set.
Auto programmes not operating.	Check <b>AUTO</b> has been selected. Check watering day is set correctly.

